

Būrookrāäm in Kapojak ñan Iien Idiñ im Men ko Kwōn Kōm̄mani Baat in Kijeek ko me rej Mōñāñe Inabōj Wāween Kōm̄mane Juon Room Erreo



Ñe baat in kijeek inabōj e deloñ mweo imōm emaroñ kōm̄man bwe mejatoto in mweo imōm ejab emman ñan ājmuur eo am, bōtab kwo maroñ kapoje juon room erreo ñan kōjparok ājmuur eo am im emman mejatoto ie. Room erreo ej juon room me emōj am kapoje ñan kōjparok bwe baat im būñal en jab lāp an deloñe ilo iien ko im ewałok kijeek inabōj.

Ñe ejab kauwōtata am pād wōt mweo imōm, am pād ilo room erreo eo ilo iien an wałok kijeek im baat nabōj enaaj lāp an jipañ yuk. Enaaj lāp an juon room erreo jipañ kain armej ro me elap an baat jelōt er, āinwōt ro im ewor aer nañinmej in menono ak ãr, rütto ro, ajri ro, ak kōrā ro im re bōrōro. Peba in kamālim in ej kwałok kilen am kapoje juon room erreo ilo mweo imōm.

*Jet iien emaroñ emmanłok am pukot
bar juon jikin kone (joor)*

Ālikin am loori būñtōn ko ñan kapoje juon room erreo, im elāñne ejab emman an moło ilowaan mweo imōm, ekuun jaram, ak elap wōt an baat deloñe mweo imōm, bōlen kwōn jab pād wōt ilo room erreo eo. Bōlen kwo maroñ etal ñan ippān ro mōttan ak ro nukwōm, ak etal ñan juon jikin im raar kapoje ñan armej, ak bar juon jikin me elōñ air condition im emmanłok mejatoto ie.

Buñtōn ko ñan Kōm̄mane Juon Room Erreo

- Kāälöt juon room.** Kāälöt juon room me ebwe an kilep im bwe en emman köjean aolepen borwaj eo ñe rej pād ilowaan. Emman juon room in kiki me elōñ an room jidikdik.
- Wāween bōbrae an baat deloñe room eo.** Kiili aolep wūnto ko im kōjam ko, bōtab jab kōm̄man bwe en apañ am diwōj.
- Kōm̄man bwe en aemōlolo.** Kwōn kajø deel ko, air condition in wūnto ko, kab air condition ñan aolepen mweo (central). Ñe ewor juon batōn in fresh air (kadeloñ kōto jān nabōj) ilo air condition eo am, kwon kuune ak kiili jikin an deloñ kōto ie (intake) im kajø e recirculation mode (ej kajerbal mejatoto ilowaan wōt mweo).
- Liklike kōto ilo room eo ñe baatat inabōj.** Kwōnaaj aikuj wia ak make kōm̄mane juon kein liklik mejatoto mokta bwe kwōn pojak kadede ñan iien an baatat nabōj, kwo maroñ liklike mejatoto kōn am kōm̄mane juon iaan wāween ko jilu me rej wałok lōñtata ilo page inla!
- Jab kōm̄mani men ko me renaaj kōm̄man bwe en baatat ak būñalñal ilowaan mweo imōm** āinwōt kabaatat, tile candle ko, kajerbal kuwat aerosol (pu loñ, kamedwōñ, bōñaj im aerłok wōt), kōmat fry, ak vacuum, ijo wōt ñe kwōj kajerbal kain vacuum me elōñ an kein liklik me elap an likliki būñal (high-efficiency particulate air, HEPA). Kwōn kajerbal juon nuknuk e tutu ak juon mop ñan jołok būñalñal.
- Kwōn pād wōt ilo room eo im kwaar kāälöt e joñan wōt am maroñ bwe en emman an jipañ yuk.** Ñe emmanłok mejatoto eo inabōj, meñe iuñwin jidik wōt iien, kwōn kapellłok wūnto ko im kōjam ko ñan kakäale mejatoto eo ilowaan.

Ñan bōk bar melele:


Bōk bar melele kōn wāween kapoje juon room erreo ilo mweo imōm: epa.gov/indoor-air-quality-iaq/create-clean-room-protect-indoor-air-quality-during-wildfire
 Alwōj juon video kōn wāween kapoje juon room erreo ilo mweo imōm: youtube.com/watch?v=V8DqzogXcVg
 Melele ko jet kōn Kijeek ko Inabōj (Wildfire): airnow.gov/wildfire-guide-factsheets/

Elōñ Wāween Liklike Mejatoto ilo Room Erreo eo



Kwōn kajerbal kain kein liklik ilo air condition(heating, ventilation, and air conditioning, HVAC), kein kamāñān, ak kein bōk kōto jān nabōj (ventilation) me elāp an jołok būñal elaññe ejab kabañ an jerbal.

Bōlen kwōnaaj aikuj in kōnono ippān juon ri jerbal in HVAC ak company eo me ear kōm̄mane air condition eo am ñan lale elaññe kwo maroñ kajerbal kain kein liklik me elāp an jołok būñal, kain eo me joñan an liklik ej 13 ak ɻapłok (minimum efficiency reporting value, MERV). Kwōn kajø wōt deel eo ilo air condition eo joñan wōt am maroñ.

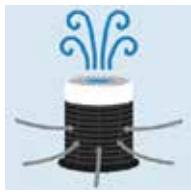

Kwōn kajerbal juon kein karreouk mejatoto edik (portable) ilo room erre eo am.

Lale bwe en jejjet im bwe ñan joñan room erre eo am. Juon in wāween lale elaññe e jejjet kein karreouk edik, mokta joñwe square feet in room eo, innām lale joñan an kein karreouk edik jołok baat in jikka (clean air delivery rate, CADR). Elāññe joñan eo ej 2/3 in joñan room eo am innām em̄man. Barāinwōt, lukkuun lale bwe kein karreouk edik en jab kōm̄man ozone (Eñin juon laajrak in kein karreouk edik ko me California Air Resources Board e ba rem̄man: <https://ww2.arb.ca.gov/list-carb-certified-air-cleaning-devices>). En jø wōt im kwōn liküt deel eo ilo joñan eo elaptata.




Kwo maroñ make kōm̄mane juon kein liklik (Do It Yourself, DIY) ñan room erre eo am.

Emaroñ dik oñean juon kein liklik DIY im e maroñ jipañ ium̄win jidik iien ñan karreouk mejatoto. Kwon lale kamelele ilał kōn wāween kōm̄mane juon, kwōn barāinwōt lale men ko re aorök ñan kōm̄man bwe en kon.

Elaññe Kwōj Make Kōm̄mane Juon Kein Liklik DIY

- Elāññe kwo maroñ, em̄manłok bōk juon kein karreouk edik (portable). Ilo ɻool, em̄manłok an kein liklik edik karreouk jān men eo im kwo maroñ make kōm̄mane DIY, elaptata ilo room ko rełap. Jidik wōt kein kam̄ool bwe em̄man an jerbal kein karreouk edik ko im kwōj make kōm̄mani. Bōtab em̄manłok an kein liklik edik (DIY) jerbal ilo juon room edik, im elāp am pād ie im etto an jø kein liklik eo, ñinwōt juon room in kiki.
- Eñin wāween am make kōm̄mane juon kein karreouk mejatoto DIY, kajerbal juon deel in box (kōm̄man in 2012 ak ekāäll̄ok) me elōñ kaköll̄e in UL ak ETL ie: elōñ thermal saftey fuse ilo deel kein me ej kōjparok bwe deel eo en jab bwl jān joñan ak kakijeekek. Kajerbal kain deel eo me e walök juon laajrak ilo kilen kōn wāween kajerbal jaram im elōñ kaköll̄e an juon doulul in kam̄ool bwe e tiljek an deel eo jerbal, ñinwōt doulul ko in UL ak Intertek (Ilo waanjoñak, melele ko me rej kadepdep tulikin deel eo renaj kwalök kaköll̄e in UL ak Intertek's ETL). Jab kajerbal juon deel box me raar kōm̄mane mokta jān 2012 (ijo wōt ke ñe kwōj jełä bwe juon thermal safety fuse epād ilowaan). Elāññe kwo aikuj kajerbal juon deel me raar kōm̄mane mokta jān 2012, en jab jø ilo iien am jako jān room eo ak ilo iien am kiki.
- Ñe kwōj make kōm̄mane juon kein karreouk mejatoto DIY, kwōn kajerbal juon kein liklik me elāp an jołok būñal, ñinwōt juon me ej MERV 13 ak ɻapłok. Made ko ilo kein liklik eo ren jejjeti ial in kōto an deel eo. Kwōn kajjioñ in kōm̄man bwe kein liklik eo en lukkuun kon ña ippān mejān deel eo. Ukote kein liklik eo ñe e jino an ettoon ak ñe kwōj ätbwiin baat.
- Elōñ wāween kōm̄man juon kein karreouk mejatoto DIY. Erkein elōñ wāween kōm̄mane:
 - Kwōn karepe juon kein liklik na ippān deel eo (video eo ej jān Washington Dept of Ecology): [youtube.com/watch?v=ujuUFj2G9_-Y](https://www.youtube.com/watch?v=ujuUFj2G9_-Y)
 - Kajerbal ruo kein liklik im cardboard ñan kōm̄mane juon triangle me kwōj kalake ñan deel eo (video eo ej jān Confederated Tribes of the Colville Reservation): [youtube.com/watch?v=ukyF2xm8cws](https://www.youtube.com/watch?v=ukyF2xm8cws)

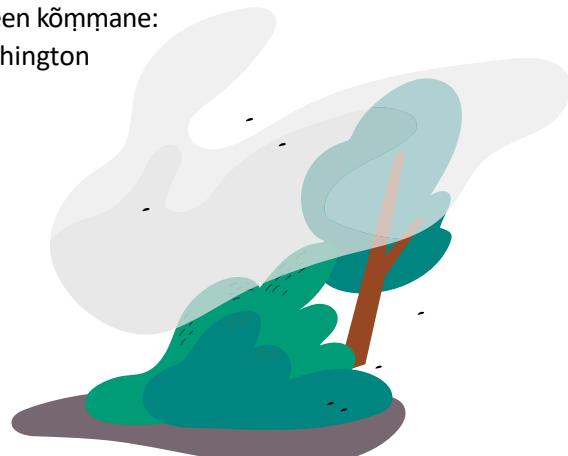

Emergency Preparedness & Response Program
1101 W. College Ave., Spokane, WA 99201
509.324.1673 | srhd.org

Spokane Regional Health District ej kallimur bwe re ban kōm̄man kaijekłok im renaj pokake kien eo etan in Title VI an Civil Rights Act in 1964 im kien in Americans with Disabilities Act. Ñan kwalök juon abñōñōk ak ñan kajjitoñ bar melele, jipañ ko rekkar, ak ri ukok ak jeje ko ilo kajin eo am, calle 509.324.1501 or visit srhd.org. // Content adapted from U.S. Environmental Protection Agency, EPA-452/F-22-001 // Bar kōm̄mane: Mae 2022